

Index

• *Symbols & Numerics* •

' (apostrophe) measurement unit suffix, 86, 125

@ (at sign) relative coordinate prefix, 54

< > (brackets, angled)
command option delimiters, 37
dimension text placeholder, 276

[] (brackets, square) command option delimiters, 36

: (colon) drawing scale separator character, 76

– (dash) foot/inch separator character, 125–126

= (equal sign) drawing scale separator character, 76

? (question mark)
help command, 165, 166
system variable command, 43

“ (quotation mark) measurement unit suffix, 126

third-party software, 15, 17, 30

3D

- arcball, 223, 224
- AutoCAD LT support, 15
- camera, 215, 218, 223
- Dashboard, 214–218
- edge effect, 221
- engine, 20
- light, ambient, 215
- measurement system, specifying, 213
- Modeling workspace, 19, 21, 212, 213
- navigation, 215, 218–219, 222–223
- orbit, 223–225, 316
- panning, 215, 225
- perspective, 218, 225
- plotting, 315–316
- projection, 218, 225
- rendering, 215
- rotation, 224, 225
- solid, freeform, 215
- solid, primitive, 215

- style, visual, 215, 219–221
- surface material, 215
- switching to/from 2D environment, 22, 214
- system requirement, 17, 212
- template, 214
- version support, 18, 211–212, 223
- view, 204, 222–223
- wireframe, 219
- zooming, 215, 225

• *A* •

abbreviation, industry-specific, 254

About to regen-proceed? message, 210

acad.dwt file, 22, 49

Acad.fmp file, 361

acadiso.dwt file, 22

acadiso.lin file, 114

acadiso3d.dwt file, 22, 213

acad.lin file, 114

acadlt.dwt file, 49, 85

acad3d.dwt file, 22, 213

acadltiso.dwt file, 85

ACADVER system variable, 44

ACI (AutoCAD Color Index), 113

Add Printer Wizard, 294

Add-A-Plot Style Table Wizard, 305

Add-A-Plotter Wizard, 294

add-on software, 15, 16

American National Standards Institute (ANSI)

- hatch pattern, 285
- paper size, 78

angle

- arc, of, 149
- constraining crosshair to, 28–29
- dimension, 260, 273
- hatch, 283, 287, 288
- precision, 131–132
- rotation angle, 179

ANSI. *See* American National Standards Institute

apostrophe (') measurement unit suffix, 86, 125

arc

- angle, 149
- chord, 149
- circular, 141, 142–143, 147, 148–151
- corner, creating curved using, 187–188
- dimension, 273, 274
- elliptical, 151–152
- joining two arcs into one, 188
- offsetting, 182
- polyline, converting arc segment to, 183
- revision cloud arc length, 156
- splitting in two, 186

ARC command, 135

arcball, 3D, 223, 224

Architectural Desktop software, 15

architectural drawing

- coordinate entry, 125–126
- measurement system, 74, 85–86
- paper size, 78
- scale, 76–77

ARRAY command, 61–62, 169, 180–181

Array dialog box, 181

arrowhead, 92, 258, 267, 268, 278. *See also* dimension

ARX (AutoCAD Runtime eXtension), 17

at sign (@) relative coordinate prefix, 54

Attach DWF Underlay dialog box, 353

ATTDEF command, 330

ATTDIA system variable, 333

Attribute Definition dialog box, 330–331

Attribute Extraction wizard, 333

AUNITS system variable, 82

AUPREC system variable, 82

AutoCAD and AutoCAD LT All-In-One Desk Reference For Dummies (Wiley Publishing), 212

AutoCAD Color Index (ACI), 113

AutoCAD Runtime eXtension (ARX), 17

AutoCAPS feature, 242

Autodesk

- software, 15
- Web site, 46, 366

AutoLISP software, 17

• B •

Background Mask dialog box, 244

backup, 55, 378

.bak files, 55

BEDIT command, 338

bitmap image, 322

block. *See also* title block

- action parameter, 338–340
- advantages/disadvantages, 323
- attribute, 326, 329–334, 335
- authoring, 321
- base point, 324, 335, 336
- color, 113
- database analogy, 330
- definition, 321, 324–327, 332, 334
- description, entering, 326
- dragging (creating using), 328
- dynamic, 321, 323, 335–341
- exploding, 326, 328, 334–335, 376
- grip editing, 337, 340–341
- inserting, 321, 322, 323, 327–329, 332
- instance, 323, 326
- layer, 324, 327
- library, 327
- multiple drawings, using in, 323, 329
- naming, 324, 336, 338
- purging unused, 334
- redefinition, 324, 328, 329
- rotating, 328, 339, 341
- scale, 326, 328, 329
- symbol group, creating using, 323, 326, 327
- table, 252, 322, 326
- visibility state, 335, 336, 337–338
- xref, relation to, 322, 345
- xref versus, 342, 348–349

Block Attribute Manager dialog box, 332

Block Authoring palettes, 337, 339, 341

Block Authoring toolbar, 337, 338


Block Definition dialog box, 324–325

Block Editor feature, 335, 338

Block In-place Editing ⇔ Edit Reference In-Place, 329

Blocks and Tables-Imperial.dwg file, 232, 301

- Blocks and Tables-Metric.dwg file, 232, 301
- BMP files, 380, 384
- brackets, angled (< >)
 - command option delimiters, 37
 - dimension text placeholder, 276
- brackets, square ([]) command option delimiters, 36
- BREAK command, 169, 186–187
- Building Your World feature, 226
- bullet, text, 245–246
- BURST command, 335
- button display when feature
 - activated/deactivated, 31, 124
- C •
- camera, 3D, 215, 218, 223
- Can't find message, 364
- Cartesian coordinate, 124
- cartoon, 80
- case sensitivity, 113
- CELTSCALE system variable, 82
- CHAMFER command, 169, 187
- channel, Communication Center, 30
- Check Spelling dialog box, 253–254
- chord, arc, 149
- CHSPACE Express tool, 197
- circle
 - arc, circular, 141, 142–143, 147, 148–151
 - center point, 56, 147, 148
 - circumference, 147
 - diameter, 56, 259, 260, 273
 - dimension, 259, 260, 273
 - donut, 135, 147, 154, 155
 - filling, 154, 155
 - object tangent to, defining, 147
 - polygon, imaginary circle enclosing, 145–146
 - radius, 56, 147–148, 259, 260, 273
 - snap, using when drawing, 148
- Classic workspace, 21, 202
- Clipboard, Windows, 174–175, 380, 385
- cloud, revision, 135, 137, 154–156
- colon (:) drawing scale separator character, 76
- color
 - ACI, 113
 - block, 113
 - configuration, changing default, 20
 - dimension, 275, 307
 - drawing area background, 20, 244, 385
 - fill, solid, 154, 155, 285, 286
 - grip color, 190
 - HSL, 113
 - layer, 52–53, 56, 111–112, 113
 - line, 137
 - LWT mapping, 110, 306, 307–310
 - name, assigned, 114
 - number, assigned, 114
 - object property, 109
 - PANTONE, 113
 - plotting, 113–114, 303, 304, 306–307, 310
 - RAL, 113
 - RGB, 113
 - standard, industry-specific, 110
 - text, 249
 - True Color mode, 307
- Color Table (CTB) files, 304, 305, 306–307, 308–309, 359
- command. *See also specific command*
 - action, accepting default, 36, 37
 - canceling, 35, 36
 - cycling through recent commands, 37
 - drawing area, using with, 40
 - dynamic input versus, 34, 135
 - editing, command-first, 160, 161, 166, 189
 - entering, 33, 36–37, 125
 - keyboard shortcut, 25, 33
 - line, 19, 32, 37
 - message display, 35, 48
 - option entry, 33, 34, 35, 37
 - prompt, importance of reading, 170
 - space, adding to, 125
 - Spacebar, using to enter, 37
 - text area, 35
 - window, 32–33, 35, 36, 37
- COMMANDLINE command, 166
- commenting drawing using leader, 277–280
- Communication Center, 30
- compiled SHape (SHX) font, 231, 361
- compressing object using STRETCH command, 176, 195

- construction tolerance, indicating in dimension, 257, 269
 - Contents⇨Command Reference⇨System Variables⇨D System Variables, 262
 - Contents⇨Customization Guide⇨Custom Linetypes, 117
 - Contents⇨Driver and Peripheral Guide⇨Use Plotters and Printers, 292
 - coordinate
 - absolute, 124, 125
 - Cartesian, 124
 - display, 27–28, 31, 53–54, 86, 124
 - DUCS, 29
 - entering, 34, 53, 123, 124–126
 - polar, 124, 125
 - precision, 123, 124–126
 - relative, 54, 124, 125
 - UCS, 204, 219, 224
 - COPY command, 171–172, 174, 175
 - COPYBASE command, 175
 - COPYCLIP command, 174, 175
 - copying
 - base point, 171, 175
 - cutting/pasting object, 174, 175
 - dimension to/from another drawing, 256, 262–263
 - displacement, 171–172
 - exchanging data with other software via, 174–175, 380, 385, 387–388
 - grip editing, 194
 - hatch property, 285
 - layout to another drawing, 120, 312
 - rotating copy of object, 179
 - SCALE command copy option, 180
 - undoing copy operation, 174
 - Windows Clipboard, using, 174–175, 380, 385
 - corner, rounding, 54–55, 187
 - cramming drawing, 376–377
 - Create Layout Wizard, 95–97
 - Create New Dimension Style dialog box, 265
 - Create New Table Style dialog box, 249
 - Create Transmittal dialog box, 360, 362
 - crosshair cursor
 - angle, constraining using polar tracking, 28–29
 - coordinate display, 27–28, 124
 - input, dynamic, 31, 166
 - movement, constraining using ortho tracking, 28, 58
 - crosshatching. *See* hatching
 - crossing object selection, 63–64, 163–165, 166, 167, 175–176
 - CTB (Color TaBle) files, 304, 305, 306–307, 308–309, 359
 - cursor. *See* specific cursor
 - curve
 - arc, circular, 141, 142–143, 147, 148–151
 - arc, elliptical, 151–152
 - corner, rounding, 54–55, 187
 - drawing, 136, 139
 - free-form, 153
 - NURBS, 152
 - spline object, 152
 - Customize User Interface dialog box, 26
 - CUTCLIP command, 175
 - cutting/pasting object, 174, 175
- 
- dash (–) foot/inch separator character, 125–126
 - Dashboard feature, 214–218
 - dash-dot linetype, 75, 92, 186
 - DDE (direct distance entry), 123, 131, 174
 - DDPTYPE command, 157
 - Decimal measurement system, 74, 86
 - Descartes, Rene (*Discourse on Method*), 124
 - Design Web Format (DWF)
 - creating DWF file, 367–370
 - described, 357, 365
 - exchanging data with other software using, 380, 382
 - exchanging data with other user using, 357
 - file size, 366
 - hyperlink, embedding, 370
 - insertion point, 353
 - password-protecting, 358, 371–372
 - plotting, 366–367, 369
 - precision, 353
 - rotating, 353
 - scale, 353, 368
 - snapping, 353
 - underlay, 322, 353

- Web, publishing to, 369
 - xref, 352–353
- DesignCenter palette, 41, 118–122, 262, 329
- Designjet Web site, 314
- dialog box, modal/modeless, 40, 41
- diazoblue machine, 291–292
- digital signature, 358, 371–372
- DIMANGULAR command, 273
- DIMARC command, 273, 274
- DIMASSOC system variable, 277
- DIMBASELINE command, 273
- DIMCONTINUE command, 273
- DIMDIAMETER command, 273
- DIMDISASSOCIATE command, 277
- dimension
 - aligned, 259, 260, 272
 - angular, 260, 273
 - arc, 273, 274
 - arrowhead, 92, 258, 267, 268, 278
 - associativity, 260–261, 275–276
 - batching entry, 256, 261
 - change to object, automatic update upon, 256, 260, 270
 - circle, 259, 260, 273
 - color, 275, 307
 - construction tolerance, indicating in, 257, 269
 - copying to/from another drawing, 256, 262–263
 - described, 255
 - diameter, 259, 260, 273
 - drafting, inheritance from manual, 257
 - editing, 265, 274–277
 - exploding, 275, 376
 - geometry, 274–275
 - horizontal, 271
 - leader, 277–280
 - line, 258–259, 267, 268
 - line, extension, 258–259, 267, 270, 271, 272
 - linear, 259, 260, 270–273
 - model space, working in, 274
 - paper space, working in, 274
 - plotting, 266, 267, 307
 - point, origin, 270, 272
 - precision, 269
 - previewing, 266
 - quick entry feature, 273
 - radius, 259, 260, 273
 - scale, 82, 92, 237, 263, 268–269
 - selecting, 260
 - side-by-side dimensions, entering, 273
 - snapping, using when entering, 270, 271–272, 275, 278
 - standard, industry-specific, 256
 - stretch operation, behavior during, 261
 - style, 93, 233, 261–269, 275, 345
 - text, 233, 258, 259, 267–268, 275–276
 - tick mark, 258
 - trans-spatial, 274
 - unit format, 269
 - vertical, 271
 - zero suppression, 269
- Dimension↔Leader, 278
- Dimension↔Linear, 271
- Dimension Style Manager dialog box, 82, 93, 264
- Dimension toolbar, 261, 271, 272, 278
- dimension variable (dimvar), 262
- DIMLINEAR command, 273
- DIMRADIUS command, 273
- DIMREASSOCIATE command, 277
- DIMREGEN command, 277
- DIMSCALE system variable, 82, 92, 237, 269
- DIMSTYLE system variable, 93
- dimvar (dimension variable), 262
- direct distance entry (DDE), 123, 131, 174
- direct manipulation editing, 160
- Discourse on Method* (Descartes), 124
- displacement editing method, 171–172, 173, 195
- dithering, monochrome, 310
- DLINE command, 144
- DONUT command, 135, 147, 154, 155
- double floating-point precision, 209
- drafting, pin-bar, 108
- Drafting Settings dialog box
 - Object Snap tab, 129–130
 - Snap And Grid tab, 50, 82, 89–91, 132
 - Tracking tab, 131
- dragging
 - block, 328
 - grip, 190, 191
 - object, 173, 177
 - zoom magnification, controlling using, 200
- Draw↔Block↔Define Attributes, 330

- Draw menu, 134–135
 - Draw Order toolbar, 26
 - Draw⇨Table, 251
 - Draw⇨Text⇨Single Line Text, 238
 - Draw toolbar
 - Arc button, 135
 - Circle button, 135
 - Construction line button, 134
 - Ellipse button, 135
 - Hatch button, 66
 - introduced, 26
 - Line button, 134
 - Make Block button, 324
 - Multiline Text button, 240
 - Point button, 135
 - Polygon button, 134
 - Polyline button, 134
 - Rectangle button, 134
 - Revision Cloud button, 135
 - Spline button, 135
 - Text button, 238
 - drawing area
 - background color, 20, 244, 385
 - clicking in, 40
 - command window, using with, 40
 - configuration, restoring default, 38
 - finding object lost on, 202–203
 - Layout tabs, 29, 38–40
 - maximizing/minimizing, 24
 - Model tab, 29, 38–40, 300
 - option menu, 40
 - orientation, 40
 - paper size, matching to, 79
 - Drawing eXchange Format (DXF), 380, 381, 382
 - drawing limits
 - grid, 82, 87, 90–91
 - model space, 49–50, 68, 88
 - plotting, 68, 87, 296, 315
 - setting, 88–89
 - zooming to, 87
 - Drawing Properties dialog box, 94
 - drawing scale, 76, 234
 - drawing scale factor, 76, 180, 234–235, 237, 376
 - Drawing Units dialog box, 74, 82, 85
 - DRAWORDER command, 26, 244, 275, 351
 - DST files, 360
 - DTEXT command, 236, 237–238, 240
 - DTEXTED system variable, 240
 - DUCS (Dynamic User Coordinate System), 29
 - Duplicate definitions will be ignored message, 121
 - DWF Composer software, 366
 - DWF. *See* Design Web Format
 - DWF Viewer software, 366, 370, 371
 - DWF6 ePlot.pc3 file, 367
 - DWG files
 - compatibility, backward, 13–14, 17, 18
 - compression, 361
 - DWF precision compared, 353
 - exchanging data with other software, using when, 380–381
 - extension display, 51
 - hyperlink, embedding, 370
 - panning, involvement in, 209–210
 - password-protecting, 358, 371–372
 - paths, 346–347
 - sending to another user, 358–360, 365
 - size, 358
 - xref, 343, 345, 346
 - zooming, involvement in, 209–210
 - DWT files, 83
 - DXF (Drawing eXchange Format), 380, 381, 382
 - dynamic input. *See* input, dynamic
 - Dynamic User Coordinate System (DUCS), 29
- E •**
- EATTEDIT command, 333
 - EATTEXT command, 333
 - Edit Attributes dialog box, 332
 - Edit Block Definition dialog box, 326, 335–336
 - Edit⇨Copy, 253
 - Edit⇨Paste Special, 253
 - Edit Scales List dialog box, 77
 - ELLIPSE command, 135, 147, 151–152
 - emailing drawing, 357, 358, 361, 363
 - engineering
 - coordinate entry, 125–126
 - measurement system, 74, 85–86

- Enhanced Attribute Editor dialog box, 333
- ePlot feature, 366–368
- equal sign (=) drawing scale separator character, 76
- erasing, 167–168, 169, 377
- ETTRANSMIT command, 357, 359–362, 366, 381
- exchanging data with other software
- block attribute, 333
 - BMP format, using, 380, 384
 - copying data, via, 174–175, 380, 385, 387–388
 - DWF format, using, 380, 382
 - DWG format, using, 380–381
 - DXF format, using, 380, 381
 - Excel, 253, 380
 - image, 349, 384–385
 - LT2 format, using, 380
 - OLE, via, 386
 - paint program, 379–380
 - PDF format, using, 380, 382–383
 - PNG format, using, 385
 - RTF format, using, 243, 248, 380, 388
 - text, 243, 248, 253
 - TIFF format, using, 384
 - transfer, round-trip, 381
 - TXT format, using, 243, 380, 388
 - Windows Clipboard, using, 174–175, 380, 385
 - WMF format, using, 380, 383–384
 - Word, 380
- exploding
- block, 326, 328, 334–335, 376
 - dimension, 275, 376
 - polyline, 140, 376
- EXPORT command, 384. *See also*
- exchanging data with other software
- Express↔Blocks↔Explode Attributes to Text, 335
- Express Tools feature, 18, 117, 118
- EXTEND command, 169, 184–185
- external reference. *See* xref
- External Reference Files Have Changed message, 342
- External References palette, 41, 322, 342, 343, 350
- **F** ●
- File↔Close, 209
- File↔Drawing Properties, 94
- File↔Drawing Utilities ↔ Purge, 334
- File↔eTransmit, 360
- File↔Install New Font, 364
- File navigation dialog box, 357
- File↔New, 22
- File↔Page Setup Manager, 312
- File↔Plot Style Manager, 305
- File↔Plotter Manager, 294
- File↔Publish, 369
- File↔Save As, 17
- File Transfer Protocol (FTP), 362–363
- fill, solid
- donut, 154, 155
 - hatch, 285, 286
- FILLET command, 54–55, 170, 187–188, 289
- Find And Replace utility, 243
- finding object lost on drawing area, 202–203
- FMP file, 360
- font. *See also* text
- custom, 232, 359
 - In-Place Text Editor, display in, 241
 - installing, 364
 - previewing, 232
 - Roman Simplex, 231
 - sending drawing to another user, including when, 359, 360, 361, 364
 - SHX, 231, 361
 - specifying, 230, 233
 - title block, 231
 - TTF, 231, 361, 364
- FONTALT system variable, 360
- FONTMAP system variable, 360
- Fonts applet, Windows, 364
- Format↔Dimension Style, 93, 264
- Format↔Drawing Limits, 49
- Format↔Linetype, 93
- Format↔Lineweight, 115
- Format↔Point Style, 157
- Format↔Scale List, 77
- Format↔Table Style, 249
- Format↔Text Style, 230

Format↔Units, 85
 Fractional measurement system, 74
 FTP (File Transfer Protocol), 362–363
 FullShot software, 388

• G •

geometry
 annotating, 229
 cramming, 376–377
 dimension geometry, 274–275
 drawing, 123, 133
 precision, 123
 tolerance, geometric, 269
 globe and chain cursor, 370
 Golden Exchange Rule, 359
 grab point, 126
 grid
 Adaptive Grid option, 90
 described, 28, 89
 drawing limits, 82, 87, 90–91
 plotting grid bubble, 80
 snapping to, 50
 spacing, 50, 82, 90, 91
 turning on/off, 90, 92
 zooming, behavior when, 82, 90
 Grid too small to display message, 82
 GRIDDISPLAY system variable, 82
 GRIDMAJOR system variable, 82
 GRIDMODE system variable, 82
 GRIDUNIT system variable, 82
 grip editing
 block grip, 337, 340–341
 color of grip, 190
 command-first editing versus, 189
 copy operation, using in, 194
 described, 160
 displaying grip, 190
 dragging grip, 190, 191
 hot grip, 190, 196
 menu, 191, 192
 mirror operation, using in, 190
 move operation, using in, 190, 193–194
 options, cycling through, 191
 pull of other object, 192
 removing grip, 192

rotation operation, using in, 190
 scale operation, using in, 190
 snap, using in, 192
 STRETCH command grip-editing operation, 191–192, 195–196
 text, 248
 tooltip, dynamic input, 191
 vertex point, 140
 Group Manager dialog box, 324

• H •

hand cursor, 60, 200
 Hatch And Gradient dialog box, 66, 282–283, 285, 289, 290
 HATCH command, 283
 Hatch Edit dialog box, 290
 hatching
 angle, 283, 287, 288
 annotation to drawing, as, 281
 ANSI-standard, 285
 hatching application, 281
 boundary, 284, 288–289
 copying hatch property, 285
 editing hatch object, 290
 fill, solid, 285, 286
 ISO-standard, 285
 layer, 66, 283
 measurement system, 75
 pick point, 283, 288, 289
 poché effect, 286
 predefined, 285, 287
 previewing, 66, 284, 290
 scale, 66, 180, 283, 287–288
 spacing, 288
 usage, appropriate, 281
 user-defined, 283, 287, 288
 help, accessing, 45–46, 165, 166, 314
 HIDE command, 219
 highlighting, rollover, 166
 HiJaak software, 384
 HP (Hewlett-Packard) Designjet Web site, 314
 HPGAPTOL system variable, 283
 HSL (Hue Saturation Luminance), 113
 hyperlink, embedding, 357, 370

• I •

image
 bitmap, 322
 clipping, 351
 importing, 349
 insertion point, 351
 raster, 322, 349–352, 359–360, 379, 384
 scale, 351
 vector, 322, 349, 350, 379
 IMAGE command, 351, 384
 Image dialog box, 351
 Image Manager dialog box, 342
 imperial measurement system, 22, 49, 74, 86, 114
 implied windowing, 163
 importing data. *See* exchanging data with other software
 IMSI HiJaak software, 384
 Inbit FullShot software, 388
 Info Palette, 41, 46
 In-Place Text Editor, 238, 241, 242, 245–246, 248
 input, dynamic
 command prompt, importance of reading, 170
 command window input versus, 34, 135
 coordinate display, 28, 31
 crosshair, 31, 166
 displaying previous input, 170
 DYN status bar button, 32
 introduced, 18
 toggling on/off, 31–32
 tooltip, 29, 31, 36, 37, 191
 Insert dialog box, 327–328
 Insert Table dialog box, 251, 253
 Insert↔Windows Metafile, 384
 Internet feature overview, 357–358
 Internet service provider (ISP), 356
 Ipswitch WS_FTP software, 363
 ISO (International Standard Organization)
 dimension style, 264
 hatch pattern, 285
 paper size, 78, 79
 isometric view, 222
 ISP (Internet service provider), 356

• J •

JOIN command, 169, 188–189
 JPEG files, 384–385
 JPGOUT command, 385
 JUSTIFYTEXT command, 249

• K •

keyboard shortcut, 25, 33
 keyword, option, 35

• L •

lassoing object, 168
 layer
 assigning property by object versus, 110–111, 375
 block, 324, 327
 color, 52–53, 56, 111–112, 113
 copying to another drawing, 120–122
 creating, 52, 57, 112–117
 current, 53, 54, 107–109, 116
 description, adding, 115
 drawing on, 53
 filtering, 116–117
 freezing, 116, 377
 grouping objects using, 107, 110
 hatch, 66, 283
 hiding/displaying, 116
 introduced, 52
 isolating, 117
 line, 111–112, 114–115, 137
 listing all layers, 118
 locking, 116
 LWT, 111–112, 115
 moving object to another, 109
 naming, 52, 57, 113, 121
 object, as named, 118–119
 object property, as, 106
 overriding object property inherited from, 110–111
 pin-bar drafting analogy, 108
 plot style, 111–112, 115
 revision cloud, 155

- layer (*continued*)
 - selecting all objects on, 166
 - standard, industry-specific, 109
 - table, 118
 - turning on/off, 116, 117
 - view, saving layer snapshot with, 204
 - xref, 343, 345
- LAYER command, 52
- Layer Properties Manager dialog box
 - accessing, 52
 - Description column, 115
 - Name list, 114
 - New Group Filter button, 117
 - New Layer button, 112
 - New Property Filter button, 117
- Layers toolbar
 - introduced, 25
 - Layer drop-down list, 53, 107, 109
 - Layer Properties Manager button, 52
- layout
 - area printable, 98
 - copying to another drawing, 120, 312
 - creating, 95–98
 - described, 94
 - dimension, scaling to, 269
 - displaying, 29
 - naming, 96
 - number of layouts, determining
 - optimal, 99
 - object, as named, 119
 - orientation, 96
 - paper size, specifying, 96
 - paper space, relation to, 38
 - plotting, 69, 297, 300–302, 309, 311
 - regeneration, 209–210
 - sheet set, changing to, 99
 - title block, 38, 96–97
 - viewport, 29, 97, 99
- LAYOUT command, 98
- LAYOUTWIZARD command, 95
- LEADER command, 277
- Leader Settings dialog box, 278, 279
- LENGTHEN command, 169, 186
- light, 3D ambient, 215
- LIMITS command, 88
- limits, drawing, 49–50, 68, 82, 88–89
- LIMMAX system variable, 82
- LIMMIN system variable, 82
- line. *See also* lineweight
 - adding segment, 128, 129, 137–138
 - arc segment, converting to polyline, 183
 - circle, defining line tangent to, 147
 - color, 137
 - command line, drawing using, 34–35
 - connecting segments into polyline, 137, 139
 - construction line, 136
 - converting segment to polyline, 183
 - coordinate, entering, 34
 - copying linetype to another drawing, 120
 - corner between two lines, creating, 54–55, 187–188
 - curved segment, polyline, 136, 142–143
 - dash-dot linetype, 75, 92, 186
 - definition, linetype, 114, 117
 - dimension extension line, 258–259, 267, 270–272
 - dimension line, 258–259, 267, 268
 - double line, drawing, 144
 - endpoint, defining, 35, 128, 138, 141, 143
 - exploding polyline, 140, 376
 - filleting using polyline, 54–55
 - infinite, 136
 - joining two lines into one, 188–189
 - layer, 111–112, 114–115, 137
 - lengthening polyline, 186
 - loading linetype, 114, 117
 - measurement system, 75, 114
 - multiline, 144
 - nonorthogonal, 270
 - object, linetype as named, 119
 - object property, linetype, 109
 - offsetting, 55, 182, 183
 - parallel, 144, 182–183
 - plotting, 70, 110, 137
 - polygon, polyline, 136
 - ray, 134, 136
 - rectangle, polyline, 136
 - removing segment, 137
 - scale, linetype, 82, 92–93
 - selection area, polyline, 166
 - snapping, using when drawing, 126–128, 137

- splitting polyline, 186
 - start point, defining, 34, 137–138, 141
 - straight segment, polyline, 136, 140, 141, 143
 - stretching, 176, 195–196
 - template, adding linetype to, 117
 - undoing change made to, 34
 - vertex point, 140
 - xref linetype, 345
- LINE command
- closing, 137, 138
 - Draw menu option, 134
 - Draw toolbar button, 34
 - PLINE command compared, 139–140
 - prompt, 34
 - Specify first point prompt, 34, 137
 - Specify next point or [Close/Undo] prompt, 34
 - Specify next point or [Undo] prompt, 34, 138
 - Undo option, 137
- Linetype Manager dialog box, 82, 93, 117
- lineweight (LWT)
- color mapping, 110, 306–310
 - default, 115
 - described, 29
 - displaying, 110
 - layer, 111–112, 115
 - object property, 109
 - plotting, 70, 110, 305, 307–310
 - polyline, 140
 - standard, industry-specific, 110
 - status bar, display in, 29
- Lineweight dialog box, 115
- Lineweight Settings dialog box, 115
- list, text, 245–248
- lost object on drawing area, finding, 202–203
- LSP software, 17
- LTSCALE system variable, 82, 92–93
- LT2 files, 380
- LUNITS system variable, 82
- LUPREC system variable, 82
- LWEIGHT command, 115
- LWT. *See* lineweight
- M •
- magnifying glass cursor, 200
 - manipulation of object, direct, 160
 - Markup Set Manager, 41, 356
 - masking, text, 244, 246
 - MBUTTONPAN system variable, 201
 - measurement system
 - Architectural, 74, 85–86
 - Decimal, 74, 86
 - default, 82
 - Engineering, 74, 85–86
 - Fractional, 74
 - hatch, 75
 - imperial, 22, 49, 74, 86, 114
 - line drawing, 75, 114
 - metric, 22, 49, 75, 76, 114
 - model space, 85–87
 - paper size, 79
 - precision, 74
 - removing unused, 77
 - scale, 76
 - Scientific, 74
 - SI, 75
 - specifying, 22, 49, 82–83
 - template, 85, 101
 - 3D Modeling workspace, 213
 - unit, linear, 82, 85
 - unitless, 74
 - MEASUREMENT system variable, 75
 - Mechanical Desktop software, 15
 - menu bar, 23, 25
 - metric measurement system, 22, 49, 75, 76, 114
 - midpoint of object, finding when snapping, 128
 - Migrate Settings dialog box, 23
 - MIRROR command, 169, 190
 - MLINE command, 144
 - model space
 - described, 38
 - dimensioning in, 274
 - drawing limits, 49–50, 68, 88
 - importance of understanding, 376
 - measurement system, 85–87

- model space (*continued*)
 - panning behavior in, 205, 207–209
 - paper space, switching to/from, 29–30, 40, 99–100, 197
 - plotting, 68–70, 295, 299–300
 - selecting all objects in, 166
 - text, adding in, 236
 - viewport, 29–30, 38
 - zooming behavior in, 205, 207–209
 - Modeling tool palette, 213
 - Modify↔Clip↔Image, 351
 - ModifyDimension Style dialog box, 93
 - Modify↔Object↔Attribute Block Attribute Manager, 332
 - Modify↔Object↔Attribute↔Single, 333
 - Modify toolbar
 - Array button, 61
 - Break At Point button, 187
 - Break button, 186
 - Erase button, 167
 - Explode button, 275
 - Extend button, 184
 - Fillet button, 54
 - introduced, 26
 - Join button, 188
 - Move button, 172
 - Offset button, 55
 - Rotate button, 179
 - Scale button, 179
 - Stretch button, 63
 - Trim button, 184
 - monochrome.ctb file, 63, 297
 - moving object
 - dragging, using, 173, 177
 - grip, using, 190, 193–194
 - MOVE command, using, 169, 171–174, 190
 - MSOLESCALE system variable, 386
 - MSPACE command, 99
 - MTEXT command
 - described, 236
 - Draw toolbar, accessing from, 240
 - DTEXT command versus, 236, 237
 - Edit option, 248
 - In-Place Text Editor, 238, 241, 242, 245–246, 248
 - Insert Field option, 244
 - justification options, 237, 238, 241
 - list options, 245
 - New Features Workshop resources, 243
 - Specify height option, 241
 - text rectangle options, 241
 - MTEXTFIXED system variable, 248
- N •
- National Institute of Standards and Technology (NIST) Special Publication 814, 75
 - NEW command, 84
 - New Features Workshop, 46, 226, 243, 314
 - New Table Style dialog box, 249
 - New Text Style dialog box, 233
 - New View dialog box, 204
 - New Visibility State dialog box, 338
 - New/Modify Dimension Style dialog box, 266–269, 270
 - NIST (National Institute of Standards and Technology) Special Publication 814, 75
 - noun-verb editing, 160
 - NURBS (NonUniform Rational B-Spline) curve, 152
- O •
- Object does not intersect an edge message, 184
 - Object Grouping dialog box, 324
 - object snap (OSNAP), 29, 57, 123, 126–130, 132
 - Object Snap toolbar, 127
 - Object Snap Tracking (OTRACK), 29
 - OFFSET command, 169, 182–183
 - OLE (Object Linking and Embedding), 386
 - one-by-one selection, 162–163
 - OOPS command, 168
 - opening
 - AutoCAD, 49
 - drawing, 22, 120, 345, 348
 - option keyword, 35
 - Options dialog box
 - Display tab, 20, 202, 301
 - Drawing Template Settings area, 84
 - Files tab, 305

- Plot and Publish tab, 293, 316
 - Profiles tab, 20
 - Selection tab, 161–162, 163, 166
 - Startup dialog box, accessing from, 85
 - system variable storage, setting in, 44
 - Systems tab, 22
 - User Preferences tab, 277
 - orientation
 - drawing area, 40
 - layout, 96
 - plot, 297
 - ortho mode
 - crosshair cursor, constraining using, 28, 58
 - overriding, 132
 - polar tracking mutually exclusive with, 29
 - polygon drawing, using in, 58, 146
 - revision cloud drawing, using in, 156
 - stretch operation, using in, 65, 176, 178, 195, 197
 - turning on/off, 58
 - orthographic view, 222
 - OSNAP (object snap), 29, 57, 123, 126–130, 132
 - OTRACK (Object Snap Tracking), 29
- p •**
- Page Setup dialog box, 302
 - Page Setup Manager dialog box, 301, 305, 312
 - palette. *See also specific palette*
 - position, locking, 30
 - toggling on/off, 41
 - Palettes→External References, 343
 - panning
 - described, 59
 - DWG file involvement, 209–210
 - model space, behavior in, 205, 207–209
 - mouse, controlling using, 60, 201
 - real-time, 59–60, 199–201
 - regeneration, 209–210
 - 3D, 215, 225
 - title block display, effect on, 206, 207
 - view, 200, 203, 204–205
 - viewport, inside, 208
 - zooming compared, 199–200
 - zooming, toggling to/from, 200–201
 - PANTONE color, 113
 - paper size, 68, 78–79, 96, 296, 301
 - paper space. *See also layout*
 - described, 38
 - dimensioning in, 274
 - importance of understanding, 376
 - layout, relation to, 38
 - model space, switching to/from, 29–30, 40, 99–100, 197
 - plotting, 300–302, 317
 - selecting all objects in, 166
 - text, adding in, 236
 - viewport, 29–30, 38
 - zoom behavior in, 205–209
 - Partner Products & Services Web site, 15
 - password, assigning to drawing, 358, 371–372
 - Paste Special dialog box, 385
 - PASTEBLOCK command, 175
 - PASTECLIP command, 174, 175
 - PASTEORIG command, 175
 - PC3 files, 96, 293, 314, 315, 360
 - PDF (Portable Document Format), 380, 382–383
 - PEDIT command, 140, 183
 - pencil and paper technical drawing, AutoCAD compared, 12
 - perspective, 3D, 218, 225
 - pin-bar drafting, 108
 - plan view, 222
 - PLINE command, 134, 136, 138–144, 286
 - Plot and Publish Job Complete message, 69–70
 - Plot dialog box
 - accessing, 68
 - Apply To Layout button, 311
 - Help button, 314
 - Hide Paperspace Objects option, 316
 - Model tab, 299
 - More Options button, 68, 296–297
 - Plot Area option, 315
 - Plot Object Lineweights option, 308
 - Plot Offset option, 315
 - Plot Stamp On option, 315

- Plot dialog box (*continued*)
 - Plot Style Table (Pen Assignments) area, 305, 309, 310
 - Plot To File option, 314–315
 - Plot Upside-Down option, 316
 - Plot With Plot Styles option, 308
 - Preview button, 69, 298
 - Printer/Plotter area, 295–296, 314, 367
 - Shaded Viewport options, 315
- Plot Screening and Fill
 - Patterns.dwg file, 307, 310
- Plot Style Table Editor dialog box, 306
- Plotter Configuration Editor dialog box, 314, 317
- Plotter Manager Add-A-Plotter Wizard, 294
- plotting. *See also* printer
 - area printable, 69, 80, 98
 - area to plot, specifying, 296, 315
 - area to plot, zooming to, 295
 - background, in, 316
 - border, 80–81
 - cartoon, facilitating using, 80
 - color, 113–114, 303, 304, 306–307, 310
 - convention, 316
 - Details Report, generating, 317
 - dimension, 266, 267, 307
 - dithering, 310
 - drawing limits, 68, 87, 296, 315
 - DWF, 366–367, 369
 - ePlot feature, 366–368
 - file received from another user, 359
 - file, to, 314–315
 - grid bubble, 80
 - layout, 69, 297, 300–302, 309, 311
 - line, 70, 110, 137
 - LWT, 70, 110, 305, 307–310
 - model space, 68–70, 295, 299–300
 - monochrome, 297, 304, 310, 383, 388
 - offset, 69, 296, 315
 - orientation, 297
 - outsourcing, 311, 367
 - paper size, 68, 78–79, 96, 296, 301
 - paper space, 300–302, 317
 - paper type, 314
 - planning, 71–73
 - previewing, 69, 297, 298
 - raster image effect on speed, 352
 - saving drawing after, 70
 - scale, 69, 77, 296, 299–300, 301–302
 - screen, planning plot on, 72
 - screening, 303, 306
 - service bureau, 311, 367
 - setup, basing on existing drawing, 73
 - sheet set, 316
 - stamp, 315
 - style, 111–112, 297, 303–307, 317, 359
 - text, 80–81, 235, 241, 267
 - 3D object, 315–316
 - troubleshooting, 316–317
 - upside-down, 316
 - viewport, 315, 316
- PLT files, 311, 369
- PMP files, 360
- PNG files, 385
- poché effect, 286
- point
 - block base point, 324, 335, 336
 - break point, 186, 187
 - copy operation base point, 171, 175
 - described, 156–157
 - dimension origin point, 270, 272
 - DWF insertion point, 353
 - grab point, 126
 - hatch pick point, 283, 288, 289
 - image insertion point, 351
 - line endpoint, defining, 35, 128, 138, 141, 143
 - line start point, defining, 34, 137–138, 141
 - midpoint of object, finding when snapping, 128
 - move operation base point, 172–173
 - rotation base point, 179
 - scale transformation base point, 179–180
 - stretch operation base point, 171, 175, 178, 196
 - style, 157–158
 - text insertion point, 238, 251
 - vertex point, 140
 - xref insertion point, 344
- POINT command, 135, 156, 158
- Point or option keyword required
 - message, 35
- Point Style dialog box, 157–158
- polar array pattern, 61, 180, 181

- polar coordinate, 124, 125
 polar mode, 28–29, 123, 131, 176, 197
 polar snap, 131–132
 polygon
 drawing, 56–59, 134, 136, 145–146
 polyline, composed of, 136
 selection area, 166, 167
 polyline. *See* line
 Portable Document Format (PDF),
 380, 382–383
 precision
 accuracy versus, 122
 angle, 131–132
 annotation, achieving using, 123
 coordinate entry, 123, 124–126
 DDE, 123, 131
 described, 122–123
 dimension, 269
 double floating-point, 209
 DWF, 353
 editing object, when, 159, 171, 174
 geometry, 123
 importance of, 122, 375
 measurement system, 74
 moving object, when, 174
 ortho mode, 131
 OTRACK, 123
 snap, 123, 126–131
 tracking, polar, 123, 131
 previewing
 array, 62, 181
 dimension, 266
 font, 232
 hatch, 66, 284, 290
 plot, 69, 297, 298
 selection, 166
 Print Troubleshooter Windows feature, 317
 printer
 adding, 294
 default, 293
 driver, 292, 314, 385
 nonsystem, 293
 specifying, 68, 96, 293, 295
 system printer, 292, 293
 Printer Support File Path↔Plot Style Table
 Search Path, 305
 printing. *See* plotting
 Profiles feature, 20
 projection, 3D, 218, 225
 Properties palette
 accessing, 106
 anchoring, 213
 dimension options, 275
 hatch options, 290
 introduced, 41
 property display in, 197
 text options, 240, 248, 252
 Properties toolbar, 26, 27, 197
 PSLTSCALE system variable, 82
 PSPACE command, 99
 PUBLISH command, 352, 357, 369–370, 372
 PUBLISHTOWEB command, 357, 370
 PURGE command, 334
- **Q** •
- QDIM command, 273
 QLEADER command, 277–279
 QNEW command, 84, 101–102
 question mark (?)
 help command, 165, 166
 system variable command, 43
 QuickCalc feature, 41, 80
 Quickstart feature, 314
 quotation mark (") measurement unit
 suffix, 126
- **R** •
- RAL color, 113
 raster image, 322, 349–352, 359–360,
 379, 384
 RAY command, 134, 136
 RECTANG command, 53–54, 134, 136,
 144–145
 rectangle
 array pattern, 61–62, 181
 corner, rounding, 54–55
 drawing, 53–55, 134, 136, 144–145
 polyline, 136
 rotating, 145
 selection area, rectangular, 163–165, 166
 text rectangle, 240, 241
 Red Green Blue (RGB) color, 113

- REDRAW command, 210
 - REFEDIT command, 329, 346
 - Reference Manager, 347, 357, 364–365, 366
 - regeneration, 209–210
 - Reload Linetypes dialog box, 117
 - rendering, 3D, 215
 - resolution, screen, 17, 388
 - revision cloud, 135, 137, 154–156
 - Revit software, 15
 - RGB (Red Green Blue) color, 113
 - Rich Text Format (RTF) file, 243, 248, 380, 388
 - rollover highlighting, 166
 - Roman Simplex font, 231
 - ROTATE command, 169, 178–179
 - rotating
 - angle, specifying, 179
 - base point, 179
 - block, 328, 339, 341
 - copy of object, 179
 - DWF, 353
 - ellipse rotation parameter, 151
 - grip, using, 190
 - rectangle, 145
 - text, 238–239
 - 3D object, 224, 225
 - xref, 344
 - RTF (Rich Text Format) file, 243, 248, 380, 388
 - ruler, Tab and indent, 242, 246–248
- S •**
- Save Drawing As dialog box, 51, 100–101, 372
 - SAVEAS command, 382
 - SAVETIME system variable, 42
 - saving
 - drawing, 14, 51, 70, 84, 377–378
 - template, 100–101
 - scale
 - architectural drawing, 76–77
 - arrowhead, 92
 - block, 326, 328, 329
 - consistency, importance of, 77
 - copying object, scaling when, 180
 - dimension, 82, 92, 237, 263, 268–269
 - drawing scale, 76, 234
 - drawing scale factor, 76, 180, 234–235, 237, 376
 - DWF, 353, 368
 - grip editing, using in scaling operation, 190
 - hatch, 66, 180, 283, 287–288
 - image, 351
 - linetype, 82, 92–93
 - measurement system, 76
 - notation, 76
 - paper size, matching to, 79
 - plotting, 69, 77, 296, 299–300, 301–302
 - standard, industry-specific, 76–77
 - template, changing scale in drawing created from, 49
 - text, 77, 92, 180, 234, 249
 - transformation, 179–180
 - viewport, 97, 208
 - xref, 344
 - Zoom command Scale option, 203
 - SCALE command, 169, 179–180
 - SCALETEXT command, 180, 249
 - screen
 - capture, 387–388
 - cleaning, 31
 - plot, planning on, 72
 - refreshing, 210
 - resolution, 17, 388
 - screening, 303, 306
 - scroll bar, turning on/off, 202
 - Security Options dialog box, 372
 - Select Color dialog box, 52–53, 113
 - Select File dialog box, 203
 - Select Image File dialog box, 350
 - Select Linetype dialog box, 114
 - Select Reference File dialog box, 343–344
 - Select Template dialog box, 83, 84, 213
 - selection
 - crossing object selection, 63–64, 163–165, 166, 167, 175–176
 - dimension, 260
 - editing, selection-first, 160, 161
 - erasing, 167, 168

- EXTEND command Fence selection mode, 184
- lassoing object, 168
- last object drawn, 166
- layer, all objects on, 166
- model space, all objects in, 166
- moving selected object, 172
- one-by-one selection, 162–163
- paper space, all objects in, 166
- polygon selection area, 166, 167
- polyline selection area, 166
- previewing, 166
- rectangle selection area, 163–165, 166
- removing object from selection set, 164
- repeating previous selection, 166
- rollover highlighting, 166
- subobject, 165
- Trim command Fence selection mode, 184
- window object selection, 163
- windowing, implied, 163
- sending drawing to another user
 - DWG file, 358–360, 365
 - email, using, 357, 358, 361, 363
 - ETRANSMIT command, using, 357, 359–362, 366, 381
 - font, 359, 360, 361, 364
 - FTP, using, 362–363
 - including dependent file set, 358, 359–360, 361–362, 364–365
 - multiple drawings, 361–362, 363
 - plot style, 359
 - plotting received drawing, 359
 - raster image, 359–360
 - sheet set, using, 360, 362
 - verifying received drawing, 363–364
 - xref, 348, 359, 364
 - zipping file set, 361–362, 363
- Setup wizards, 85
- SETVAR command, 43
- SHADEMODE command, 219
- sheet set
 - described, 313
 - layout, changing to sheet set, 99
 - plotting, 316
 - sending drawing to another user using, 360, 362
- Sheet Set Manager palette, 22–23, 41, 362
- shrinking object using STRETCH command, 176, 195
- SHX (compiled SHape) font, 231, 361
- SI (Système International d'Unités), 75
- signature, digital, 358, 371–372
- SnagIt software, 388
- SNAPMODE system variable, 82
- snapping
 - arc drawing, using in, 150
 - break operation, using in, 186
 - circle drawing, using in, 148
 - described, 28, 89
 - dimension, using when entering, 270, 271–272, 275, 278
 - DWF, 353
 - grab point, 126
 - grid, to, 50
 - grip editing, using in, 192
 - hot spot, 89
 - interval, 50, 89, 90, 91
 - line drawing, using in, 126–128, 137
 - midpoint of object, finding, 128
 - moving object, using when, 174
 - offset operation, using in, 148
 - OSNAP, 29, 57, 123, 126–130, 132
 - OTRACK, 29
 - override, temporary, 126, 130, 132
 - point, using as snap location, 157
 - polar, 131–132
 - precision, 123, 126–131
 - stretch operation, using in, 65
 - text, 238, 239
 - turning on/off, 58, 67, 89, 91–92
 - zooming, behavior when, 90
- SNAPUNIT system variable, 82
- software, third-party, 15, 17, 30
- solid
 - freeform, 215
 - primitive, 215
- space. *See* model space; paper space; workspace
- Spacebar, using to enter command, 37
- spelling checker, 253–254
- SPLINE command, 135, 147, 152–154
- SPLINEDIT command, 153
- splitting object in two, 186–187
- Standard Colors dialog box, 53

- Standard toolbar
 - Copy button, 175
 - Cut button, 175
 - DesignCenter button, 120
 - introduced, 25
 - Markup Set Manager button, 356
 - Match Properties button, 197
 - Paste button, 175
 - Plot button, 68
 - QNEW button, 84, 102
 - QuickCalc button, 80
 - Undo button, 65
 - Zoom Realtime button, 200
 - starting AutoCAD, 49
 - Startup dialog box, 85
 - status bar
 - Associated Standards File button, 30
 - Clean Screen button, 31
 - Communication Center button, 30
 - coordinate display, 27, 86, 124
 - customizing, 30
 - DUCS button, 29
 - DYN button, 29, 32
 - GRID button, 28
 - Lock/Unlock Toolbar Palette Positions button, 30
 - LWT button, 29
 - Manage Xrefs button, 30
 - Maximize/Minimize Viewport button, 30
 - MODEL/PAPER button, 29–30, 40, 99, 300–301
 - ORTHO button, 28, 58
 - OSNAP button, 29, 57
 - OTRACK button, 29
 - POLAR tracking mode button, 28–29
 - SNAP button, 28, 50
 - Trusted Autodesk DWG button, 30
 - STB (Style Table) file, 304, 305, 306, 310, 359
 - STRETCH command
 - base point, 171, 175, 178, 196
 - compressing object using, 176, 195
 - crossing selection box, defining, 63–64, 175–176
 - dimension behavior when applying, 261
 - displacement, 171, 195
 - grip-editing operation, 191–192, 195–196
 - line, applying to, 176, 195–196
 - ortho mode, 65, 176, 178, 195, 197
 - snapping, using when, 65
 - undoing stretch operation, 65, 172
 - style
 - arrowhead, 258, 267
 - dimension, 93, 233, 261–269, 275, 345
 - family, 265
 - plot, 111–112, 297, 303–307, 317, 359
 - point, 157–158
 - secondary, 265
 - substyle, 265
 - table, 249–250, 304–306, 309, 310, 317
 - text, 230–233, 236, 267, 331, 345
 - 3D visual style, 215, 219–221
 - Style Table (STB) file, 304, 305, 306, 310, 359
 - Styles toolbar, 25, 27, 264, 271
 - subobject, 165
 - Substituting message, 364
 - surface material, 3D, 215
 - symbol
 - block, grouping using, 323, 326, 327
 - table, 118, 120, 121
 - system requirement, 17, 212
 - system variable. *See also specific system variable*
 - described, 42
 - listing all system variables, 43–44
 - setting, 43, 81, 92–93
 - storage location, 44
 - Système International d'Unités (SI), 75
- T •
- Tab and indent ruler, 242, 246–248
 - table
 - block table, 252, 322, 326
 - CTB file, 304, 305, 306–307, 308–309, 359
 - layer, 118
 - style, 249–250, 304–306, 309, 310, 317
 - symbol, 118, 120, 121
 - text, 249–253
 - Table Cell Format dialog box, 250
 - Table Style dialog box, 249, 250
 - TABLEEXPORT command, 253
 - TABLESTYLE command, 249

- tangent
 - circle, defining object tangent to, 147
 - spline, 153
- TechSmith SnagIt software, 388
- template
 - creating drawing based on, 49–50, 84, 101–102
 - creating template based on drawing, 84, 100–102
 - described, 83
 - dimension style, copying to, 263
 - file extension, 83
 - layout, creating from, 98
 - linetype, adding, 117
 - location, 102
 - measurement system, 85, 101
 - naming, 101, 102
 - plot style, 305
 - saving, 100–101
 - 3D drawing, 214
 - workspace, 84
- text. *See also* font
 - abbreviation, industry-specific, 254
 - aligning, 239, 331
 - AutoCAPS feature, 242
 - block attribute, 326, 329–334, 335
 - bullet, 245–246
 - case, changing, 243
 - case sensitivity, 113
 - color, 249
 - dimension, 233, 258, 259, 267–268, 275–276
 - drafting process, adding later in, 229
 - field, 244–245, 246, 252, 326, 329–334
 - Find And Replace utility, 243
 - front, bringing to, 244
 - geometry, annotating, 229
 - height, 233, 234–236, 241, 249, 267
 - importing, 243, 248, 253
 - indentation, 242, 243, 247, 248
 - In-Place Text Editor, 238, 241, 242, 245–246, 248
 - insertion point, 238, 251
 - justification, 237, 238, 241, 249, 331
 - leader, 279–280
 - line, inserting blank, 246
 - list, 245–248
 - masking, 244, 246
 - model space, adding in, 236
 - multiline, 236, 240
 - paper space, adding in, 236
 - paragraph, 230, 236
 - plotting, 80–81, 235, 241, 267
 - rectangle containing, imaginary, 240, 241
 - rotating, 238–239
 - RTF file format, 243, 248, 380, 388
 - scale, 77, 92, 180, 234, 249
 - single-line, 230, 236, 238–240
 - snap mode, 238, 239
 - spelling checker, 253–254
 - style, 230–233, 236, 267, 331, 345
 - symbol, entering, 243
 - tab, 242, 246–248
 - table, 249–253
 - TXT file format, 243, 380, 388
 - vocabulary, industry-specific, 254
 - wrap, 236, 237, 240–241, 242, 279
 - zooming, 231, 248
- TEXT command, 230
- Text Formatting toolbar, 241–242, 243, 251
- Text Style dialog box, 230, 231, 232, 267
- TEXTTOFRONT command, 244, 275
- third-party software, 15, 17, 30
- 3D
 - arcball, 223, 224
 - AutoCAD LT support, 16
 - camera, 215, 218, 223
 - Dashboard, 214–218
 - edge effect, 221
 - engine, 20
 - light, ambient, 215
 - measurement system, specifying, 213
 - Modeling workspace, 19, 21, 212, 213
 - navigation, 215, 218–219, 222–223
 - orbit, 223–225, 316
 - panning, 215, 225
 - perspective, 218, 225
 - plotting, 315–316
 - projection, 218, 225
 - rendering, 215
 - rotation, 224, 225
 - solid, freeform, 215
 - solid, primitive, 215
 - style, visual, 215, 219–221

3D (*continued*)

- surface material, 215
- switching to/from 2D environment, 22, 214
- system requirement, 17, 212
- template, 214
- version support, 18, 211–212, 223
- view, 204, 222–223
- wireframe, 219
- zooming, 215, 225

3D House file, 217

3DFORBIT command, 223

3DORBIT command, 223–224, 316

tick mark, dimension, 258

TIFF files, 384

title bar, 24

title block

- font, 231
- layout, 38, 96–97
- listing available title blocks, 97
- panning, effect on title block display, 206, 207
- plotting, 80–81
- Xref, attaching as, 96
- zooming, effect on title block display, 206, 207

TOLERANCE command, 269

tolerance, construction, 257, 269

Tool Palettes window, 41, 328–329

toolbar. *See also specific toolbar*

- customizing, 26
- position, locking, 30

Tools⇨Attribute Extraction, 333

Tools⇨Block Editor, 335

Tools⇨DesignCenter, 120

Tools⇨Folder Options⇨View, 102

Tools⇨Options⇨Display⇨Colors, 385

Tools⇨Options⇨Files⇨Template Settings, 102

Tools⇨Options⇨System, 212

Tools⇨Palettes⇨Dashboard, 217

Tools⇨Palettes⇨External References, 350

Tools⇨Security Options, 372

Tools⇨Spelling, 253

Tools⇨Wizards⇨Create Layout, 95

Tools⇨Workspaces⇨AutoCAD Classic, 22

Tools⇨Workspaces⇨3D Modeling, 22

Tools⇨Xref, 329

tooltip

- accessing, 26
- described, 26
- input, dynamic, 29, 31, 36, 37, 191
- Model tab, 38
- OSNAP, 128

TRIM command, 169, 184–185

TTF (TrueType) font, 231, 361, 364

TXT file, 243, 380, 388

• U •

UCS (user coordinate system), 204, 219, 224

undo functionality

- copy operation, 174
- erase operation, 168
- extend operation, 185
- line edit, 34
- move operation, 172
- Standard toolbar Undo button, using, 65
- stretch operation, 65, 172
- trim operation, 185

unitless measurement system, 74

user coordinate system (UCS), 204, 219, 224

User's Guide menu, 117

• V •

Valid boundary not found message, 289

variable, system. *See system variable*

VBA (Visual Basic for Applications), 17

vector image, 322, 349, 350, 379

verb-noun editing, 160

version

- AutoCAD LT overview, 15–16
- file compatibility with older, 13–14, 17, 18
- saving drawing in earlier, 14
- 3D support, 18, 211–212, 223
- 2006, 17–18
- Windows version, support for older, 17

vertex point, 140

video card support, 212

view
 isometric, 222
 layer snapshot, saving with, 204
 orthographic, 222
 pan, 200, 203, 204–205
 plan, 222
 3D, 204, 222–223
 zoom, 200, 203, 204–205
 VIEW command, 204
 View Manager dialog box, 204–205
 View↔Named Views, 204
 View↔Orbit↔Free Orbit, 224
 View↔Redraw, 210
 View↔Refresh, 102
 View↔Regen, 210
 View↔Regen All, 210
 View↔3D Views↔Viewpoint Presets, 223
 View↔3D Views, 222
 View Transitions dialog box, 203
 View↔Zoom↔All, 51
 View↔Zoom↔Previous, 208
 VIEWPOINT command, 223
 Viewpoint Presets dialog box, 223
 viewport
 described, 38
 layout, 29, 97, 99
 location, specifying, 97
 locking, 208
 maximizing/minimizing, 30, 209
 model space, 29–30, 38
 panning inside, 208
 paper space, 29–30, 38
 plotting, 315, 316
 regeneration, 210
 scale, 97, 208
 zooming inside, 208
 Viewports toolbar, 77
 Visual Basic for Applications (VBA), 17
 vocabulary, industry-specific, 254
 VPMAX command, 209
 VPMIN command, 209
 VSM (Visual Styles Manager) palette,
 220–221
 VTOPTIONS command, 203
 VuePrint software, 384
 VueScan VuePrint software, 384

• W •

warning message display, customizing,
 22, 212
 Web, publishing to, 352, 357, 369–370. *See*
also Design Web Format
 Welding Fixture-1.dwg file, 95, 206
 Wiley Publishing (*AutoCAD and AutoCAD*
LT All-In-One Desk Reference For
Dummies), 212
 window
 management, 24
 object selection, 163
 windowing, implied, 163
 Windows
 Clipboard, 174–175, 380, 385
 Fonts applet, 364
 Print Troubleshooter, 317
 printer, system, 292, 293
 Registry, system variable storage in, 44
 version support, 12, 17
 Windows MetaFile (WMF), 380, 383–384
 WinZip software, 362
 wireframe, 219
 WMF (Windows MetaFile), 380, 383–384
 Word, exchanging data with, 380
 workspace
 Classic, 21
 described, 212
 switching, 22, 25
 template, 84
 3D Modeling, 19, 21, 212, 213
 Workspaces dialog box, 49, 212
 Workspaces toolbar, 25, 27
 Workstations dialog box, 22
 WS_FTP software, 363

• X •

XCLIP command, 348
 XLINE command, 134, 136
 XNOTIFYTIME system variable, 342
 XOPEN command, 345
 xref (external reference)
 attachment reference type, 343–344
 binding, 347

xref (external reference) *(continued)*

- block, relation to, 322, 345
- block versus, 342, 348–349
- child drawing, 342
- clipping, 348
- described, 322, 341
- detaching, 347
- dimension style, 345
- DWF file, 352–353
- editing xrefed drawing, 346
- file, referencing, 343–347
- image, raster, 350–351, 352
- insertion point, 344
- layer, 343, 345
- linetype, 345
- list, generating, 347
- object, as named, 119
- opening xrefed drawing, 345, 348
- overlay reference type, 344
- parent drawing, 342
- path, 345, 346–347
- policy, importance of developing, 347
- reloading, 347
- report, generating, 347
- rotating, 344
- scale, 344
- sending drawing to another user,
 - including when, 348, 359, 364
- text style, 345
- title block, attaching as, 95
- unloading, 347
- update, automatic, 342

Xref Manager dialog box, 30, 342

XREFNOTIFY system variable, 342

• Z •

- zipping file set, 361–362, 363
- zooming
 - All option, 202
 - animation, 203
 - described, 59, 199
 - dragging, controlling using, 200
 - drawing limits, to, 87
 - DWG file involvement, 209–210
 - exiting zoom mode, 60
 - Extents option, 172, 201, 202
 - finding object lost on drawing area
 - using, 202
 - fly out option, 202
 - grid behavior when, 82, 90
 - LWT display, effect on, 110
 - magnification, returning to original, 60
 - model space, behavior in, 205, 207–209
 - mouse, controlling using, 60, 201
 - Object option, 203
 - pan compared, 199–200
 - pan, toggling to/from, 200–201
 - paper space, behavior in, 205–209
 - Previous option, 203
 - real-time, 59, 200, 201, 202, 203
 - regeneration, 209
 - Scale option, 203
 - snap behavior when, 90
 - text, applying to, 231, 248
 - 3D, operating in, 215, 225
 - title block display, effect on, 206
 - transition, smooth view, 203
 - view, 200, 203, 204–205
 - viewport, inside, 208
 - Window option, 203